

Instruction manual



SMART  BASS
Power Control System 0.5 ~ 2 OHMS



The installation of this product must be made by a qualified professional.

Index

- 01 • Term of warranty
 - Technical assistance
 - Smart line presentation
- 02 • Introduction
 - Smart line presentation
 - Key recommendations
- 03 • Functions, inputs & outputs
- 04 • Power supply connector
 - LEDs indicators & protection system
- 05 • Installation
 - Recommended wire gauge & fuse
- 06 • Technical features

Term of warranty

TARAMPS, located at Júlio Budisk highway, SN, KM 30 - Alfredo Marcondes - SP, ZIP CODE 19.180-120, warrants this product against design, manufacturing, assembly and/or joint and several defects due to design flaws that make it unsuitable or inappropriate for its intended use, for a period of 12 months from the date of purchase. In the event of a defect within the warranty period, TARAMPS' liability is limited to repairing or replacing the device manufactured by It.

This warranty does not include:

- Products that were damaged by incorrect installation, water infiltration, tampering by unauthorized individuals.
- Scratched or torn warranty seal;
- Cases in which the product is not used under regular conditions;
- Defects caused by accessories, modifications or equipment attached to the product;
- The product presents damage resulting from drops, impacts or the action of agents of nature (floods, lightning, etc.);
- Costs of removal and reinstallation of the equipment, as well as its transport to the technical assistance location;
- Damages of any kind, resulting from problems with the product, as well as losses caused by discontinuation of use.

Technical assistance

For international support, check on our website:

www.taramps.com.br/en/rede-de-assistencias-tecnicas

or contact direct the factory support:

Phones: +55 18 3266-4050 / +55 18 99749-3391

E-mail: service@taramps.com.br

Smart Line Presentation

Multi-impedance: Featuring new control technology and new functions, the SMART 8 BASS has 8000W RMS rated power in the range of 0.5 to 2 Ohms: (0.5 - 1 - 1.33 - 1.5 - 1.67 and 2 Ohms with same power);

RCA input for up to 4V RMS: Input gain adjustment that allows head units up to 4V RMS output level;

Dual RCA IN / OUT Input: RCA connector with input and output function, eliminates the needing of "Y" cables for send the same unput signal to another amplifier;

Power connector for cables up to 2/0 AWG: Allows the use of power cables with larger gauge (up to 70mm²) for higher performance;

AUTO-Restart Protections: The amplifier automatically restarts after a protection event;

RAMP audio initialization: After turning on the amplifier, audio is released gradually (ramp).

Introduction

Read this manual before preparing the product. In case of doubt, contact our technical support: **(18) 3266-4050** or **www.taramps.com.br**.



At the end of its useful life, this product must not be disposed of in household waste. Look for an electronic equipment collection or recycling center for proper disposal.

Declaration of Conformity



TARAMPS ELECTRONICS LTDA
Alfredo Marcondes - SP
Brazil

Hereby, Taramps Electronics Ltda declares that the product SMART 8 BASS complies with the Directive 2014/30/EU, according with the following harmonized standard:

-EN 50498:2010 *Electromagnetic compatibility (EMC) - Product family standard for aftermarket electronic equipment in vehicles*

The full text of the EU Declaration of Conformity is available at the following Product Page on Internet.

Safety requirements

To ensure proper use, please read through this manual before using the amplifier. It is specially important that you know the **CAUTIONS** contained here.

- The installation of this amplifier must be done by a qualified professional.
- Wear safety glasses, insulated gloves and correct tools for installing this product.
- This amplifier is for use with 12V batteries. Always check the voltage before installing.
- This amplifier must be installed in a firm place with at least 1" space around the heatsink for proper heat spreading.
- Never install the amplifier in places exposed to dust, humidity and water. Pay attention to install it far from fuel tank, fuel lines, heat sources and other parts of vehicle.
- Be sure to install protection fuse or a circuit breaker near to battery. Follow the ampere rating as indicated here in this manual. Use of improper fuse or circuit breaker could result in overheat, smoke, damage to product, injury or burns.
- Avoid running wires over or through sharp edges. Use rubber or plastic grommets to protect any wires routed through car's body.
- Before make any connection to amplifier, disconnect the battery negative terminal.
- When in use, the external surface of may amplifier becomes hot. Avoid touching the heatsink area and keep childrens far from the amplifier.
- This amplifier may produce high sound pressure levels. Avoid continuous exposure to levels over 85dB to prevent permanent hearing loss.
- Output connections for speakers may have voltage levels when the amplifier is operating. Make sure that the amplifier is turned OFF before proceed any connection or disconnection in this terminals.
- If you want to dispose this amplifier, don't throw it on domestic waste. It must be collected by an used electronic product disposal service for proper recycling.

Safety

As you read this manual, pay attention to the safety symbols.


CAUTION

This symbol with **"CAUTION"** is intended to alert the user to the presence of important instructions. Failure to heed the instructions will result in risk of injury to user or product damage.



Taramps reserves the right to modify the contents of this document at any time without prior notice and does not have the obligation to apply the changes in units which were previously produced.

Functions, inputs & outputs

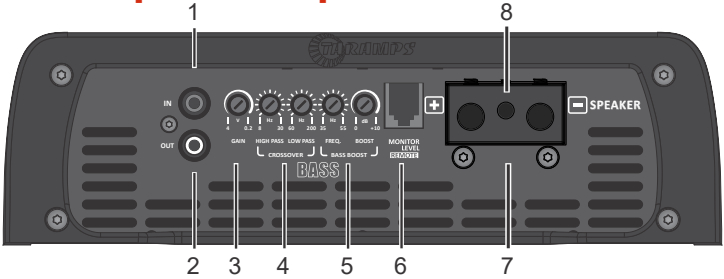

1 - IN: Input of signal to be amplified. Connect the to the RCA output of the Head Unit using good shielded cable to avoid noise interference.

2 - OUT: Audio signal output. Sends the same input (IN) signal to another amplifier, allowing cascading.

3 - GAIN: Adjusts the input sensitivity of the amplifier, allowing a perfect adjustment to the output signal levels of various head units models on the market. It is possible to adjust from 4V (minimum sensitivity) to 0.2V (maximum sensitivity).

4 - CROSSOVER

HIGH PASS FILTER (HPF): Variable setting from 8Hz to 30Hz, which determines the start of the amplifier's operating frequency.

LOW PASS FILTER (LPF): Variable setting from 60Hz to 200Hz, which determines the end of the amplifier's operating frequency.

5 - BASS BOOST

FREQ.: Set the frequency of bass boost from 35Hz to 55Hz.

BOOST: Set the boost level from 0 to + 10dB at the frequency set in FREQ.






6 - MONITOR LEVEL REMOTE: Connection to an accessory, which function is to control the gain and monitor the amplifier where all information from the indicator LEDs, such as distortion (CLIP/TEMP) and protection actuation (PROT), will be displayed simultaneously. **(Accessory not included).**

7 - TERMINAL REMOTE: It must be connected to the remote output of the head unit using a 18 AWG cable.


8 - SPEAKER: SPEAKER: Output (positive and negative) for connecting transducers (speakers). Follow the indicated polarity.

For speaker associations, the impedance to consider is the resulting impedance:

CAUTION Due to the presence of voltage at the output terminals when the product is turned on, avoid contact with them. Risk of electric shock.

Loudspeakers Parallel connection example	Quantity Impedance	Resulting Impedance	Power
	D2+D2 1 OHM 1 OHM	0.5 OHM	8000W RMS
	4 x 4 OHMS	1 OHM	
	3 x 4 OHMS	1.33 OHMS	
	4 x 6 OHMS	1.5 OHMS	
	2 x 4 OHMS	2 OHMS	

Power supply connector

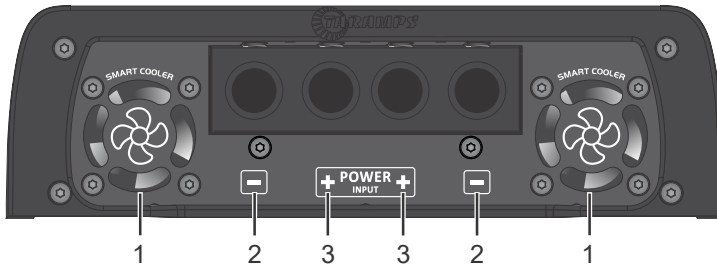

1 - SMART COOLER: This amplifier has four internal ventilation fans. For perfect functioning, the amplifier must be installed in a cool and aired place with at least 1" (25mm) space around the heatsink for proper heat spreading. The usually working temperature of amplifier is 70°C (158°F).

CAUTION The fan and ventilation openings are responsible for cooling the amplifier when it is in use, so it cannot be obstructed.

2 - POSITIVE POWER SUPPLY: Use 2/0 AWG cables direct from the positive battery terminal, with fuse or circuit breaker (360A), as close to it as possible.

3 - NEGATIVE POWER SUPPLY: Use 2/0 AWG cables as short as possible, connected to the negative battery pole.

In order for your amplifier to have the best performance, it is necessary to use all the power inputs. See example on the next page. We recommend that all cables have tinned ends for better electrical contact.

In case of power bus bar using, avoid tightening with extenders on the allen wrench, as excessive torque may break the the terminal.

CAUTION Before making any connections to the power terminals, make sure that the negative (-) of the vehicle battery is disconnected.

LEDs indicators & protection systems



Blue LED steady on:
Indicates that the amplifier is turned on.



Flashing yellow LED: Excessive temperature (May be caused by obstruction of the internal fans, improper installation or poorly ventilated location). When the amplifier reaches the temperature of approximately 90°C (194°F), the thermal protection starts working, the audio is interrupted and the yellow LED will start flashing. The fans will be functioning, in order to cool down the components quickly. Only when the amplifier reaches a safe temperature level, the audio is released and the amplifier gets back to its normal functioning.

We recommend don't turn off the amplifier, so that the cooling time will be shorter, through the ventilation of fans.

Blinking yellow LED according to music: Indicates that the amplifier is operating at the threshold of distortion. If the red LED also blinks, it indicates excessive distortion.



Red LED blinking:
Short-circuit or impedance lower than that supported at output. The amplifier automatically rechecks the output every 5 seconds for 5 times.

RED LED flashes 2x:
Supply voltage less than 9V.

RED LED flashes 3x:
Power supply voltage greater than 17V.

Installation


CAUTION CAUTION: All connections to power supply, input and output connectors must be carried out only with amplifier off.

Recommended wire gauge & fuse

Positive / negative power supply cable _____ **2 x 2/0 AWG**
Output cables wire gauge _____ **7 AWG**
Remote cable _____ **18 AWG**
Protection fuse or circuit breaker _____ **360A**

Calculated considering a maximum length of 4m. Distance greater than this, you will need to increase the cable gauges.

CAUTION Using wire gauges below the recommendation will result in power loss and overheating of wiring.
Check polarity and never reverse power supply cables due to the risk of damage to the amplifier.
It is compulsory to install a protection fuses or circuit breakers as close as possible from batteries.

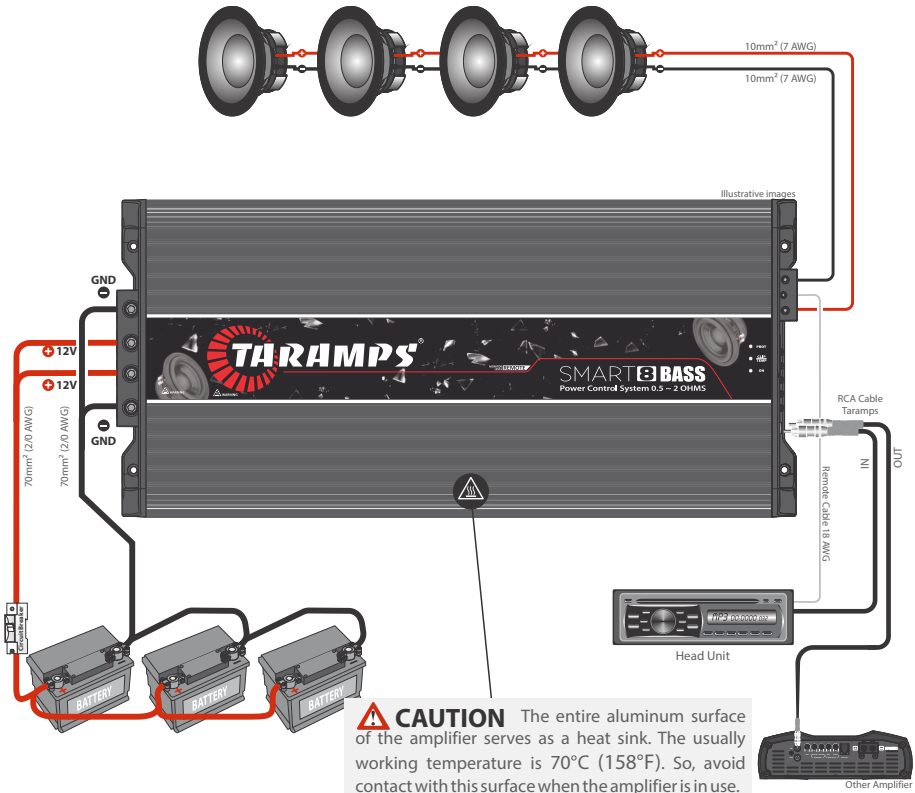


Examples of connections in the power supply input.
Note: Required battery bank capacity: At least 360A

CAUTION This equipment is not suitable for use in places where children may be present.

Technical features

Output Impedance Range:	0.5 Ohm ~ 2 Ohms
Number of Channels:	01
Output Power @14.4VDC*	
0.5 OHM:	8000W RMS
1 OHM:	8000W RMS
2 OHMS:	8000W RMS
4 OHMS:	4800W RMS
Input Sensitivity:	4V ~0.2V
Signal- to-noise Ratio:	>90dB
Frequency Response:	8Hz ~ 200Hz (-3dB)
Crossover HPF (High Pass Filter):	8Hz ~ 30Hz (-12dB/8ª) Variable
LPF (Low Pass Filter):	60Hz ~ 200Hz (-12dB/8ª) Variable
Bass Boost: Freq.: Boost:	35Hz ~ 55Hz 0 ~ +10dB
Efficiency:	78% @ 0.5 Ohm 82% @ 1 Ohm 86% @ 2 Ohms
Input Impedance:	10K Ohms
Protection System:	Output short-circuit, low/high supply voltage and Thermal protection
Minimum Supply Voltage:	9VDC
Maximum Supply Voltage:	17VDC
Idle Consumption:	5.0A
Musical Consumption @14.4VDC:	356A @ 0.5 Ohm 339 @ 1 Ohm 323 @ 2 Ohms
Rated Power Consumption:	712A @ 0.5 Ohm 678 @ 1 Ohm 646 @ 2 Ohms
Dimensions (W x H x L):	9.37" x 2.80" x 20.16"
Weigth:	16.39lb

*Rated power with 40Hz sinusoidal signal, THD <= 1%, with resistive loads, measured with SMD/AD-1 audio power analyzer or equivalent and the product at lower than 50°C case temperature and 14.4V supply voltage.
The values as above are typical and may vary, due to electronic components tolerance or manufacturing process.
For further informations or questions, visit our website or contact TARAMPS support.

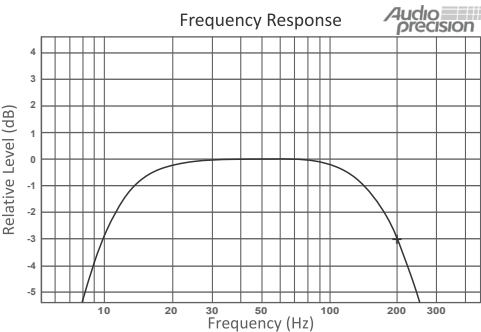



+55 18 3266-4050

Manufactured by :
TARAMPS ELECTRONICS LTDA
Tax ID: 11.273.485/0001-03
Julio Budisk Rd, SN, KM 30
Alfredo Marcondes - SP
Indústria Brasileira
www.taramps.com.br